


# FETE 5mx10m


## Assembly Instructions

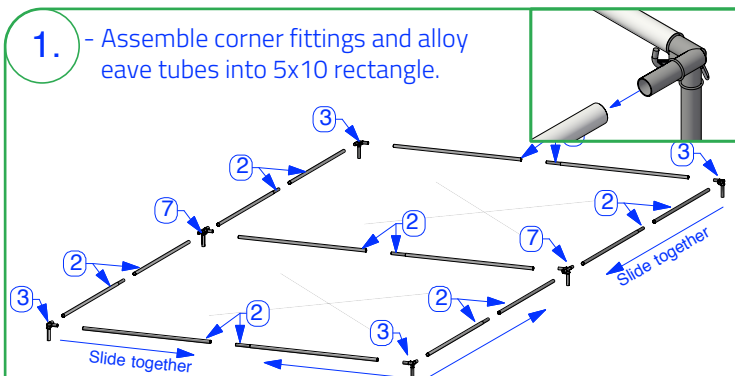


1. - Assemble corner fittings and alloy eave tubes into 5x10 rectangle.




2. - Attach brace cables over corner fitting hook.  
- Lift last corner top wire.  
- Repeat for second set of wires.

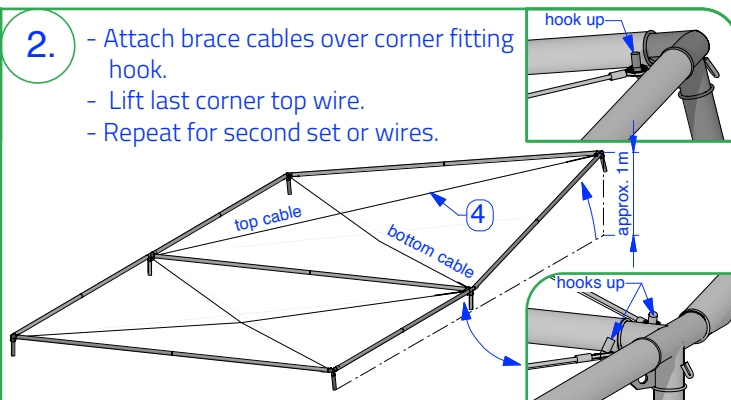


3. - Fit roof fabric over assembled frame.

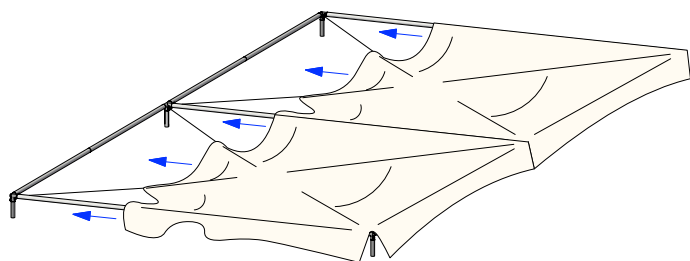

4. - Pull web loop down over each corner & tee fitting lug.

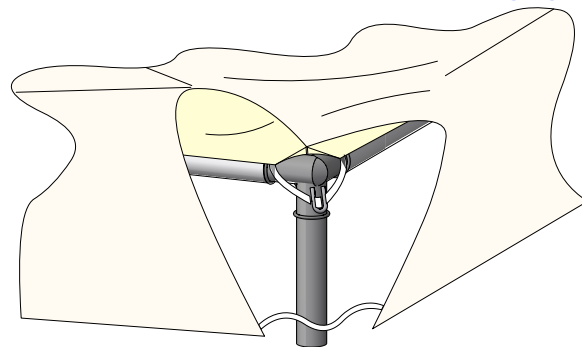


5. - Button lock base fitting to leg alloy.  
- Raise side onto legs with erecting fork at centre of eave.  
- Hook web straps to base fitting loop.

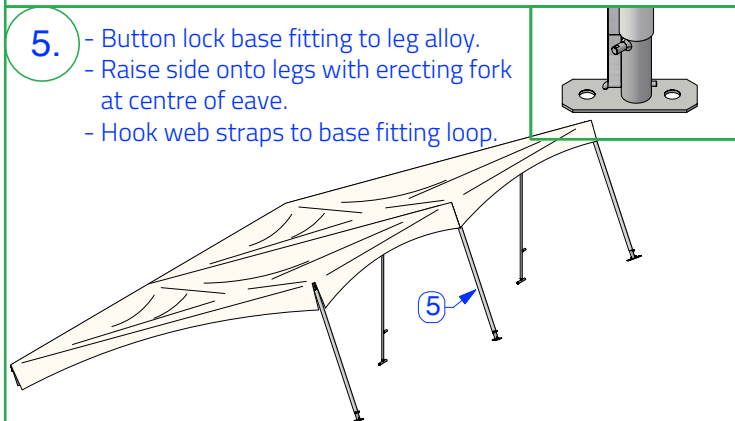


Recommend : Strong man lifts with fork and others insert legs.

6. - Insert centre pole cap into roof apex.  
- Roll centre pole on top cable to the centre where cables cross.  
- Pull lower cable under to lock into centre pole roller.

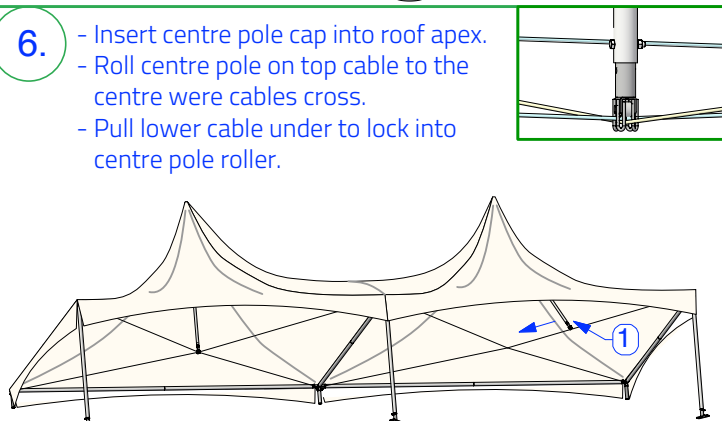


7. - Raise onto legs with erecting fork at centre of eave.  
- Secure straps to base feet.  
- Tension corners evenly with straps.

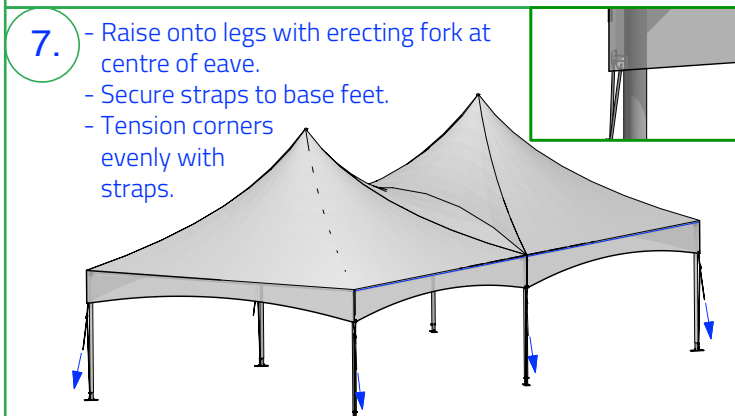

Recommend : Strong man to lift with fork and others to insert legs.

8. - Peg base feet to ground.  
- Base alignment for base rails outside.

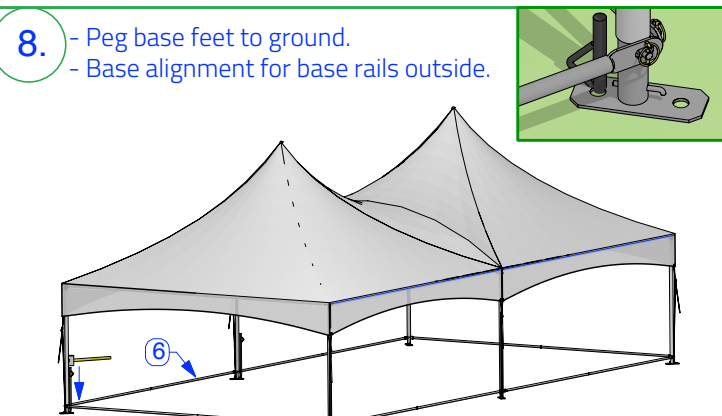

Fete marquees must be securely fixed down at all times.  
Minimum hold down force for each leg is 250kgs.

Baytex  
Ph: 07 579 0190  
info@baytex.co.nz